
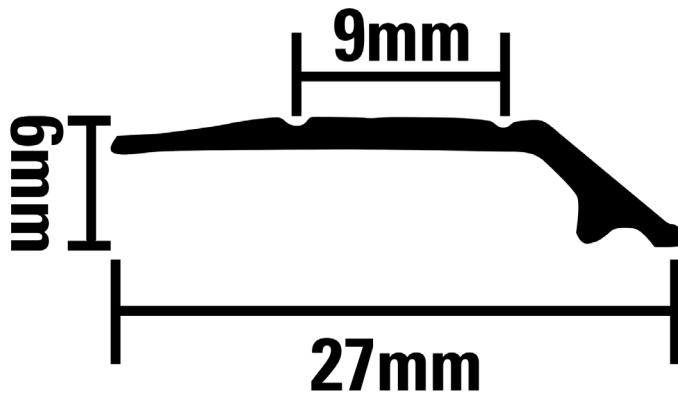


Vinyl Edge Small

RT2127A**Screws Included** 

FINISHES

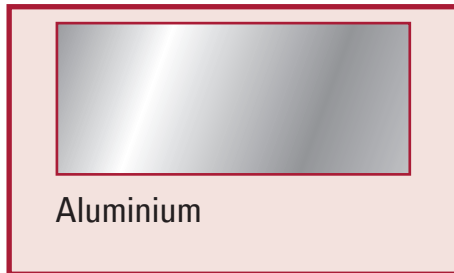

PRODUCT DESCRIPTION

The Vinyl Edge Small is designed for covering the edge of vinyl 5mm thick, providing a neat and protective finish.

These bars are ideal for protecting the edges of thinner vinyl. The bar is screwed down through the vinyl flooring to keep it protected.

DIMENSIONS

This doorbar is 27mm wide, 6mm tall and comes in 2.7m lengths. The entire doorbar is visible once installed.

MAINTENANCE

Roberts Doorbars are easy to maintain, requiring no special materials to clean.

Aluminium can be corroded by alkaline substances so alkaline cleaner materials should be avoided and quickly removed if contact is made.

Cement and cement-based substances, such as some grouts, become alkaline in contact with water. It is important to correctly seal the area surrounding the doorbar to prevent water pooling and damaging both the substrate and doorbar. Moisture resistant underlay is recommended if compatible with flooring.

The aluminium finishes will oxidise over time. A polishing agent can be used to remove it however it will oxidise again. Aluminium oxide results in a duller finish but is protective.

INSTALLATION

1. Measure the length of the vinyl flooring edge/doorway and cut the profile to match.
2. Fit the flooring. For best results, ensure the material is flattened. Roberts Heavy Duty and Extendable Floor Rollers will make sure the flooring is smooth during the fitting process. Cut the flooring material to size.
3. Position the doorbar so the underside is pressed against the edge of the flooring and mark the material. Make sure the screw down points are marked clearly.
4. Remove the profile. Drill into the substrate through the vinyl and insert the fixings appropriate for the subfloor.
5. Screw the doorbar down through the flooring, making sure to cover the entire edge of the material.